




STAVIOR

By Cenaura Technologies

Cassette Airstream Sterilizer

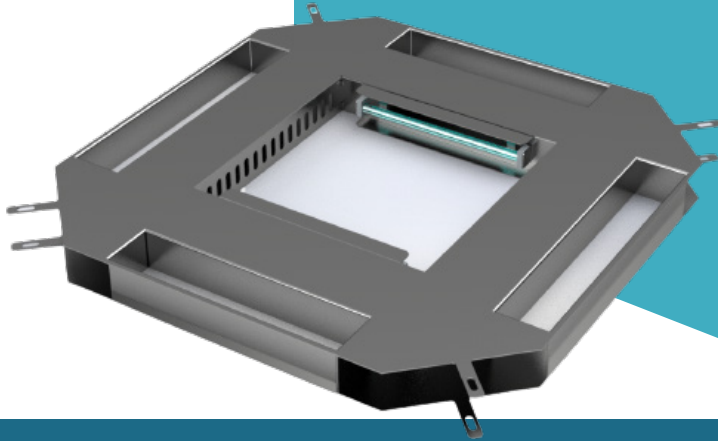

The HVAC Airstream Sterilizer Cassette has been designed as a universal Sterilizing unit for Cassette Air Conditioners. The unit has built-in UVC lamps to deactivate aerosol pathogens that may be present in the recirculating air passing through the Cassette AC. The unit can be installed as the bandwidth between the facia panel grill and the actual air conditioning unit.

- ◆ Achieves a kill-zone for microbial deactivation of not less than 99.9% per pass
- ◆ The airstream flowing through the duct is sterilized in the kill zone during the dwell time
- ◆ Can be installed in either horizontal or vertical orientation as per the dimensions and layout of the cassette AC
- ◆ The design intensity of the lamp is based on the wavelength of 254nm and is ozone free
- ◆ The optional controller ensures the optimum life of the lamps through intelligent power management
- ◆ UVC intensity sensor installed on the frame or the vicinity to indicate UV index or absolute irradiance value

Effective Sterilization

Continuous cycle HVAC airstream sterilization
Sterilizes aerosol and surface bound pathogens
High power dosage to cover corners and shadows

Intuitive Experience

Deploy, manage, and monitor devices
Addresses danger of under-dosing
Eliminates human error

Powerful Zapping


Uses the most effective 254 nm wavelength
High pathogen kill rates of up to 99.9%
Rapid fluence rates for fast turn-around times

Sturdy Construction

Powder coated MS steel for durability
Quartz sleeves for lamp protection
IP65 enclosure for dust and humidity protection

Technical Specifications

Model No	UVC-CAM35
Short Description	Cassette Airstream Sterilizer
Dimensions L x W x H	32.67" x 32.67" x 2.44"
Power Rating (Wattage)	35 W
Power Source (Voltage)	230 V
Frequency	50/60 Hz
Fluence Rate	90 $\mu\text{W}/\text{cm}^2$
Lamp Life	9000 Hrs
Warranty	1 Year

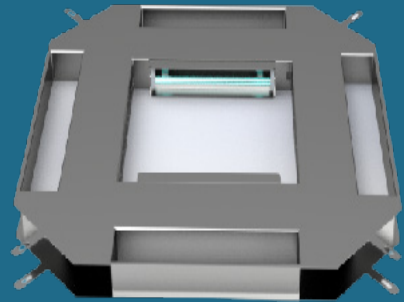

Certifications



ATAL INCUBATION CENTRE
CENTRE FOR CELLULAR
& MOLECULAR BIOLOGY

HEAD OFFICE

Cenaura Technologies Pvt Ltd
No 201, Sree Homes, Plot No 51,
MB Society, Madhapur, Hyderabad - 500084

REGD. OFFICE

Cenaura Technologies Pvt Ltd
FT-3G, Block A, Jain Srikar Auroville,
Khanamet, Madhapur, Hyderabad - 500084

contact@stavior.com
+91 7993351666
www.stavior.com