


Upper Air Sterilizer - Wallmount




STAVIOR

By Cenaura Technologies

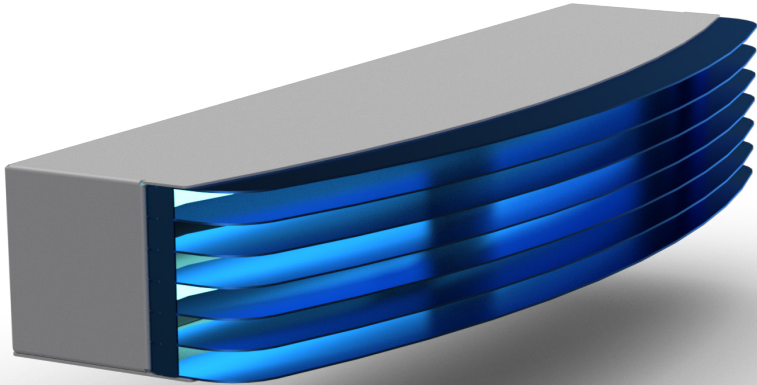

The Upper Air Sterilizer Wallmount units are effective for controlling dangerous airborne contaminants in high-risk or crowded areas, warm air convection lifts airborne harmful pathogens into the upper air and get killed when exposed to UV radiation. These units can be easily installed anywhere in the room on plain walls or corners to destroy airborne pathogens, viruses, bacteria and mold.

- ▶ Eliminates harmful aerosol pathogens and lowers chances of cross contamination
- ▶ Offers a safe and effective air disinfection method by creating an irradiation zone in the upper portion of any space.
- ▶ Designed to enable room occupation during the decontamination process to reduce the risk of spreading infection and is ozone free
- ▶ Suitable for continual use in occupied and poorly ventilated areas on a 24/7 basis

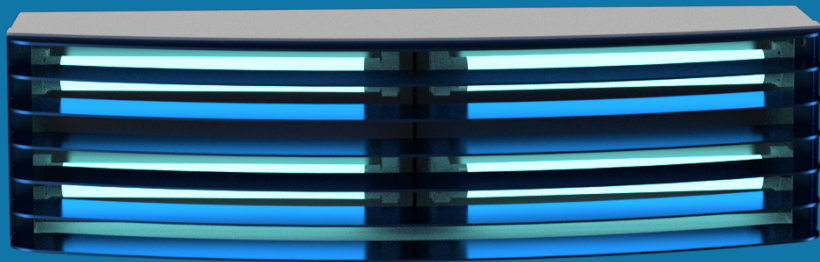

Effective Sterilization

Continuous cycle, air stream triggered sterilization
 Sterilizes direct and shadowed surfaces
 High power dosage to cover shadows

Intuitive Experience

Easy to install and operate
 High UV output to power ratio
 Safe irradiation zones for busy places

Powerful Zapping

Uses the most effective 254 nm wavelength
 High pathogen kill rates of up to 99.99%
 Rapid fluence rates for fast air changes in the area

Sturdy Construction

Powder Coated MS Steel for durability
 High Gloss aluminium reflector
 Lamp failure indicator

Technical Specifications	
Short Description	Upper Air Sterilizer - Wallmount
Dimensions (L x D x H)	20" x 6" x 4"
Power Rating (Wattage)	50 W
Power Source (Voltage)	230 V
Frequency	50/60 Hz
Fluence Rate	104 $\mu\text{W}/\text{cm}^2$
Lamp Life	9000 Hrs
Warranty	1 Year

Certifications



**ATAL INCUBATION CENTRE
 CENTRE FOR CELLULAR
 & MOLECULAR BIOLOGY**

HEAD OFFICE

Cenaura Technologies Pvt Ltd
 No 201, Sree Homes, Plot No 51,
 MB Society, Madhapur, Hyderabad - 500084

REGD. OFFICE

Cenaura Technologies Pvt Ltd
 FT-3G, Block A, Jain Srikar Auroville,
 Khanamet, Madhapur, Hyderabad - 500084

contact@stavior.com
 +91 7993351666
 www.stavior.com